



MESTRA®

MEZCLADORA DE VACIO IRIS 2 ADVANCED
 IRIS 2 ADVANCED VACUUM MIXER
 MALAXEUR SOUS VIDE IRIS 2 ADVANCED

R-080518

MESTRA®

MEZCLADORA DE VACIO IRIS 2 ADVANCED

IRIS 2 ADVANCED VACUUM MIXER

MALAXEUR SOUS VIDE IRIS 2 ADVANCED

R-080518

Nº	Referencia	Descripción	Description
1	080517-02	Carcasa superior	Upper housing
3	080518-30	Carátula	Cover
4	080515-04	Pulsador	Button
5	080520-04	Vacuómetro	Vacuum gauge
6	080516-05	Pomo descarga	Discharge knob
7	080516-03	Cuerpo descarga	Discharge body
8	080516-11	Junta cuerpo	Body O-ring
9	080516-10	Junta eje	Shaft O-ring
10	080516-04	Eje descarga	Discharge shaft
11	030010-08	Muelle descarga	Discharge spring
12	060002	Espátula de plástico (12 u.)	Plastic spatula (12 u.)
13	000230	Fusible (2A)	Fuse (2A)
	000231	Fusible (4A)	Fuse (A)
14	080490-06	Base conexión	Conection base
15	080517-03	Carcasa inferior	Inner housing
16	000250	Cable 230 V	Cable 230 V
	000252	Cable 115 V	Cable 115 V
17	080516-25	Filtro	Filter
18	080520-22	Bocallave	Drive socket
19	080520-24	Junta tórica pipa	Pipe O-ring
20	080422-17	Interruptor general	General switch
21	080490-29	Rectificador	Rectifier
22	080515-05	Condensador	Capacitor
23	080516-17	Transformador 230 V	Transformer 230 V
	080590-13B	Transformador 115 V	Transformer 115 V
24	000116	Tubo (metros)	Tube (meters)
25	080517-07	Chasis	Chasis
26	080516-09	Goma	Rubber
27	080001-02	Bomba 230 V	Pump 230 V
	080001-02B	Bomba 115 V	Pump 115 V
28	080515-10	Motor	Motor
29	080516-07	Retén	Seal
30	080590-21	Pasacables	Cable bushing
31	080518-31	Control placa base	Control board
32	080518-32	Control display	Control display