

## INSTALACIÓN:

Abra el embalaje. Encontrará una base de 5 patas con ruedas, un cilindro neumático con su cubierta, un asiento y un respaldo.

1.



Monte el cilindro con su cubierta telescópica en la base de 5 patas.

2.



Monte el respaldo en el asiento.

3.



Retire el tapón de seguridad de la punta del cilindro.

4.



Monte el asiento con el respaldo sobre el cilindro.


Ref. 100298



## REGULACIÓN:



Siéntese, levante la manilla y deje subir el asiento hasta la altura deseada. Vuelva a bajar la manilla para fijar la altura.

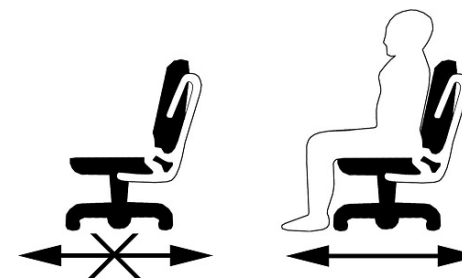

### Ruedas con frenado de seguridad

La silla incorpora un sistema de frenado de seguridad.

- Cuando no hay nadie sentado las ruedas se bloquean para evitar caídas a la hora de sentarse.
- Cuando se sienta alguien se desbloquean y giran libremente.

## INSTALLATION:

Open the box. You will find a 5-leg base, a gas spring with its cover, a seat and a backrest.

1.



2.



Insert the gas spring with its telescopic cover into the 5-leg base.

Assembly the backrest on the seat.

3.



4.




Take off the safety hat on the top of gas spring.

Put the seat on the gas spring.

Ref. 100298



## REGULATION:

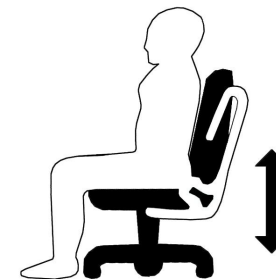

Sit down, press the handle up and let the seat go up to the desired height. Down the handle again to fix the height.



### Wheels with safety brakes

The chair incorporates a safety braking system.

- When no one is seated the wheels lock to prevent falls when it comes to sitting down.
- When someone sits down, they unlock and rotate freely.