




LED lamp

rotating arm

Ref. 100289

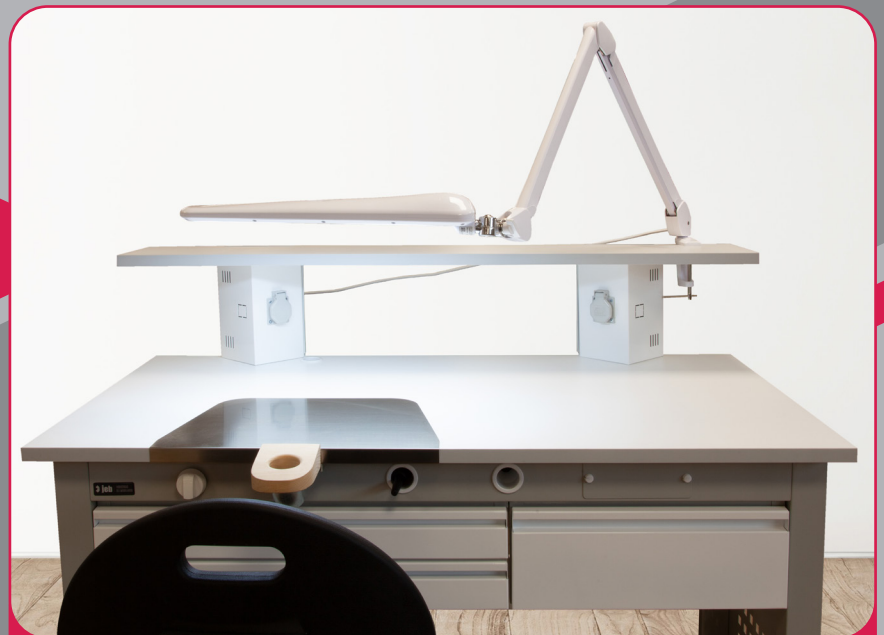

View of the lamp at workstation.



Lamp view to the left.

SAFE CAUTIONS:

- ✓ Indoor use only.
- ✓ Environment temperature: -5~40 °C
- ✓ Humidity: ≤ 95 %
- ✓ Never disassemble the unit unless you are a qualified technician.
- ✓ Plug must be taken out while repairing the lamp.
- ✓ The lamp can only be mounted on horizontal surface with thickness from 13~63 mm (0.5~2.5").
- ✓ If the cord of this lamp is damaged, it shall be exclusively replaced by a qualified technician.



Lamp view to the right.

USE:

- ✓ Remove all packaged.
- ✓ Clamp the bracket to the edge of a solid horizontal surface.
- ✓ Insert the bottom stem of the arm into the hole in the bracket.
- ✓ Plug in the working lamp.
- ✓ Turn the lamp on by using the ON/OFF switch.
- ✓ Choose the proper light by the multifunction switch.

Characteristics

Power supply: 220-240 V, 50 Hz.

Light source: 90 LEDs (~15 W)

Luminance: ~1092 Lumen

Consumption: Máx. 14,5 W

Output voltage: 24 V.

Colour temperature: 6000-7000 K.

Lifespan of LED: ~50 000 hours.

With adaptor.



MESTRA

Talleres Mestraitua SL
 (+34) 944 530 388
 info@mestra.es - www.mestra.es
 48150 SONDIKA (Spain)



Sistema de
 Gestión
 ISO 9001:2015
 www.tuv.com
 ID 1100018003