

## INSTALACIÓN

Abra el embalaje. Encontrará una base de 5 patas con ruedas, un cilindro neumático con su cubierta, un asiento y un respaldo.

1.



**Retire el tapón de seguridad de la punta del cilindro.**

2.



Monte el cilindro con su cubierta telescópica en la base de 5 patas.

3.



Monte el respaldo en el asiento y fíjelos apretando el pomo.

4.



Monte el asiento con el respaldo sobre el cilindro.

## REGULACIÓN

Siéntese en la silla y proceda a la regulación:



Afloje el pomo A, regule la altura del respaldo y vuelva a apretar el pomo.

B



Levante la manilla B y deje subir el asiento hasta la altura deseada. Vuelva a bajar la manilla para fijar la altura.

C




Levante la manilla C y deje ir el asiento hacia delante hasta la inclinación deseada. Vuelva a bajar la manilla para fijar la inclinación.

D



Levante la manilla D y regule la inclinación del asiento. Vuelva a bajar la manilla para fijar la inclinación.

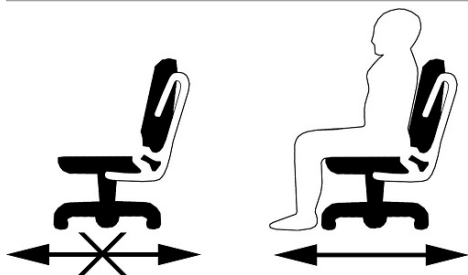

### Ruedas con frenado de seguridad (EN 1335)

La silla incorpora un sistema de frenado de seguridad. Cuando no hay nadie sentado las ruedas se bloquean para evitar caídas a la hora de sentarse. Cuando se sienta alguien se desbloquean y giran libremente.

## INSTALLATION

Open the box. You will find a 5-leg base, a gas spring with its cover, a seat and a backrest.

1.



Take off the safety hat on the top of gas spring.

2.



Insert the gas spring with its telescopic cover into the 5-leg base.

3.



Fix together the seat and backrest through the knob.

4.



Put fixed seat onto gas spring.

## REGULATION

Sit down on the seat and proceed as following:

B



Press the handle B up and let the seat go up until the desired height. Down the handle again to fix the height.

C



Press the handle C up and let the seat go forward until the desired inclination. Down the handle again to fix the inclination.


D



Press the handle D up and vary the seat inclination. Down the handle again to fix the inclination.



Release the knob A, fix the backrest height and tighten the knob again.

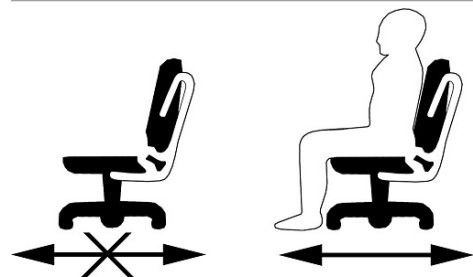

### Wheels with safety brakes (EN 1335)

The chair incorporates a safety braking system.

When no one is seated the wheels lock to prevent falls when it comes to sitting down.

When someone sits down they unlock and rotate freely.